


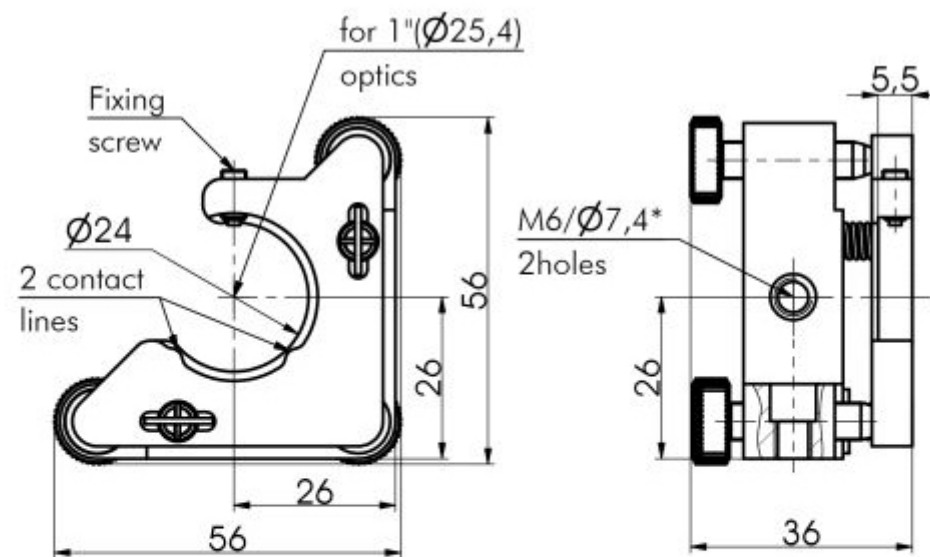

*slide M4(8-32) screws

through combined M6/ $\varnothing 7,4$

mounting/clearance holes to mount the

unit immediately to M4(8-32) holes, or

mount the unit directly on any M6 tip