


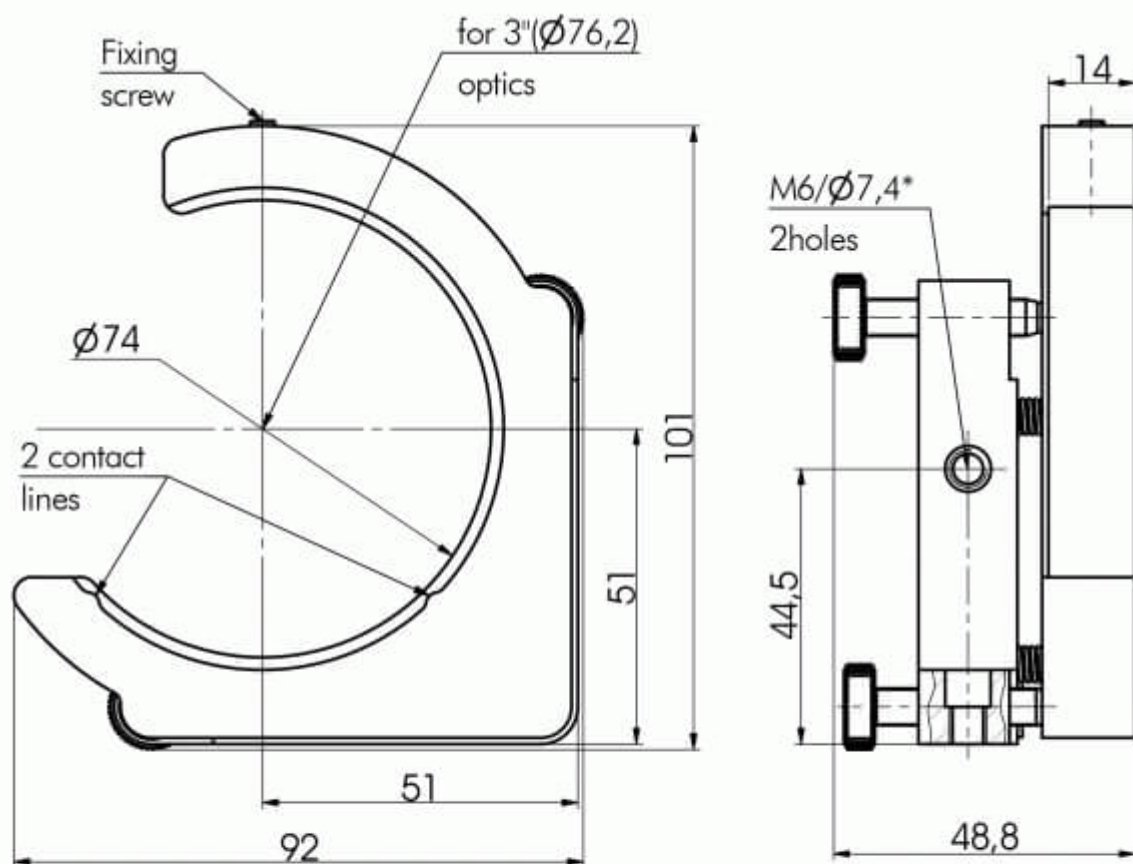

*slide M4(8-32) screws
through combined M6/ $\phi 7,4$
mounting/clearance holes to mount the
unit immediately to M4(8-32) holes, or
mount the unit directly on any M6 tip